

IMPORTANT

This quick guide outlines the steps you should follow to enroll your appliance using the App **Rosières E-Picurien** if you have a smartphone iOS or Android.

NOTE – The frequency of the home Wi-Fi network has to be set on the 2.4 GHz band. You can not configure the machine if your home network is set to the 5 GHz band.


01 START




Download the **Rosières E-Picurien** App from the Store.

NOTE – The App is available for Android (version 4.4 or higher) and iOS (version 8.0 or higher) devices.

02

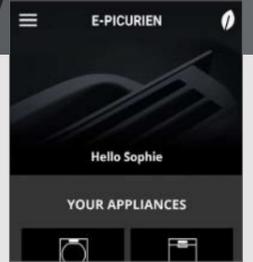


Open the **Rosières E-Picurien** App and create your user profile tapping on the **“Register”**. Accept the privacy policy and fill in the required fields.

NOTE – If you already have a **Rosières E-Picurien** user profile, you can login using your credentials.


NOTE – You can browse through the functions of the whole **Rosières E-Picurien** line-up by tapping on the **“Demo”** button.

03

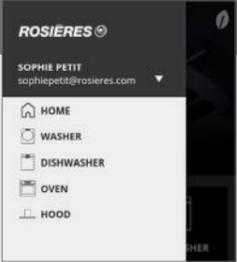


In the homepage, tap on the icon with the three bars on the top left to enter your profile, then tap on **“REGISTER NEW APPLIANCE”** and select the name of the product that you want to enroll.

04

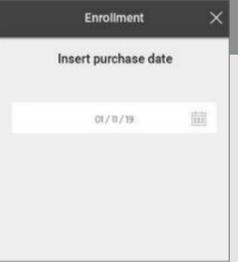


Insert the purchase date of your appliance (DD/MM/YYYY), then tap on **“Proceed”**.

05

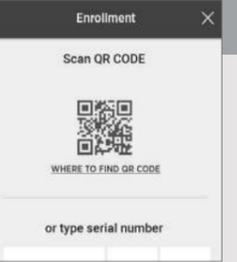

Insert the 16 digits of the serial number or scan the QR code on the instruction manual helping you with the image above. Tap on **“Next”**. Check the correctness of the data and tap on **“Confirm”**. Once the system has recognized the product, tap **“Next”**.

06

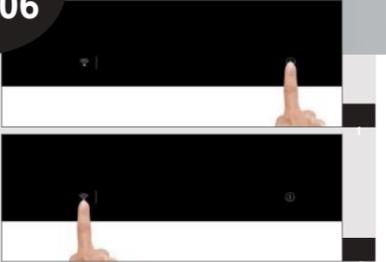

On the appliance:

- 1) Switch on the hob by pressing the power button as indicated and wait until the Wi-Fi LED stops blinking and turns off.
- 2) Start a cooking process on any zone of your hob (e.g. even a pot of water at power level 1 is ok) in order to make it work.
- 3) Press and keep hold the **Wi-Fi button** until **“rr”** appears on the central display.

On the App - tap on **“Next”**.

07



Exit the **Rosières E-Picurien** App.

Go to your device Wi-Fi settings.


08



In the list of available Wi-Fi networks, select **“WIFIHOB-xyzk”**.

If you do not find it, wait few more seconds or proceed with a new scan.

09

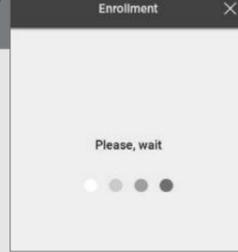

Exit from the settings of your device.

Return to the **Rosières E-Picurien** App and wait for the App to detect the appliance.

Once the **“Wi-Fi Network is active”** screen appears, tap on **“Next”**.

10



Insert the password of your home Wi-Fi network.

Select the type of password (WEP or WPA), then tap on **“Confirm”**.


The enrollment process is now finished.

NOTE – If this is not automatically synchronised by the App, please insert the name of your home Wi-Fi network in the first box; pay attention to the difference between lowercase and uppercase.

IF THESE SET UP IS NOT SUCCESSFUL

It's important to establish a good Wi-Fi signal strength between the home router and the appliance: low Wi-Fi signal strength would cause the failure of the final stage of the set up. To assess if this is the case, start the connection process again from Step 1; when you get to Step 7, place with your device (smartphone or tablet) next to the router and search for **“WIFIHOB-xyzk”** net generated by the machine. If this does not come up as an option, it means that the router cannot see the appliance. In this case, we highly recommend you to bring the router near the machine (if possible) or contact your internet provider to purchase a compatible **“Wi-Fi Range Extender”** to increase the strength of the signal.

Remote monitoring mode

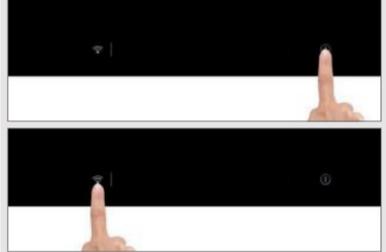

To enable remote monitoring, switch on the hob by pressing the **power button**.

Press once the **Wi-Fi button** to switch on the Wi-Fi.

END

